

BFM[®] fitting guideline – Tool Release

Tool Release connectors (TR)

Make sure to inspect your BFM[®] connector as well as the inside of the spigot before each installation and check for damages or product / cleaning agent residues.



Installation of the connector:

Push the snap ring of the connector together ("kidney shape") and set the seal with the two rings into the back of the spigot. Then let the connector snap into the ring profile of the spigot. CAUTION: Keep hands clear of the snap ring and the spigot as it will snap out with force!



Ready!

The connection is now closed-off dust-tight. To protect the snapband, please make sure to position the connector with the TR label facing front towards the drill hole in the spigot.



Remove the connector:

Push with the TR tool through the hole in the spigot against the snap ring, so that it bends to the inside. CAUTION: Make sure the tip of the tool has no sharp edges as these might otherwise damage the connector material.

This document does not imply any legally binding assurance concerning specific properties of the BFM[®] fittings or the suitability for a particular application. The responsibility of complying with any governing laws and regulations relevant to the use of BFM[®] fittings is the obligation of the user. Subject to technical changes without prior notice. BFM[®] is a registered trademark of BFM Global Ltd.

Walter Gerätebau GmbH / Neue Heimat 16 / 74343 Sachsenheim-Ochsenbach
T +49 7046 980-0 / info@walter-cleaningsystems.de / www.walter-cleaningsystems.de